



DOWN FLOW

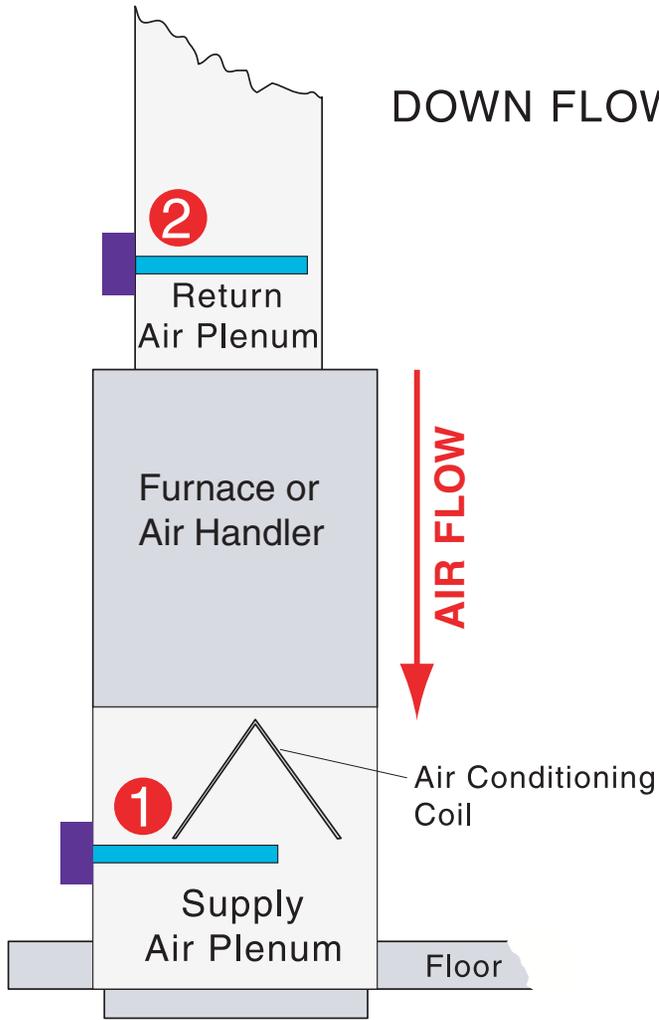


UP FLOW

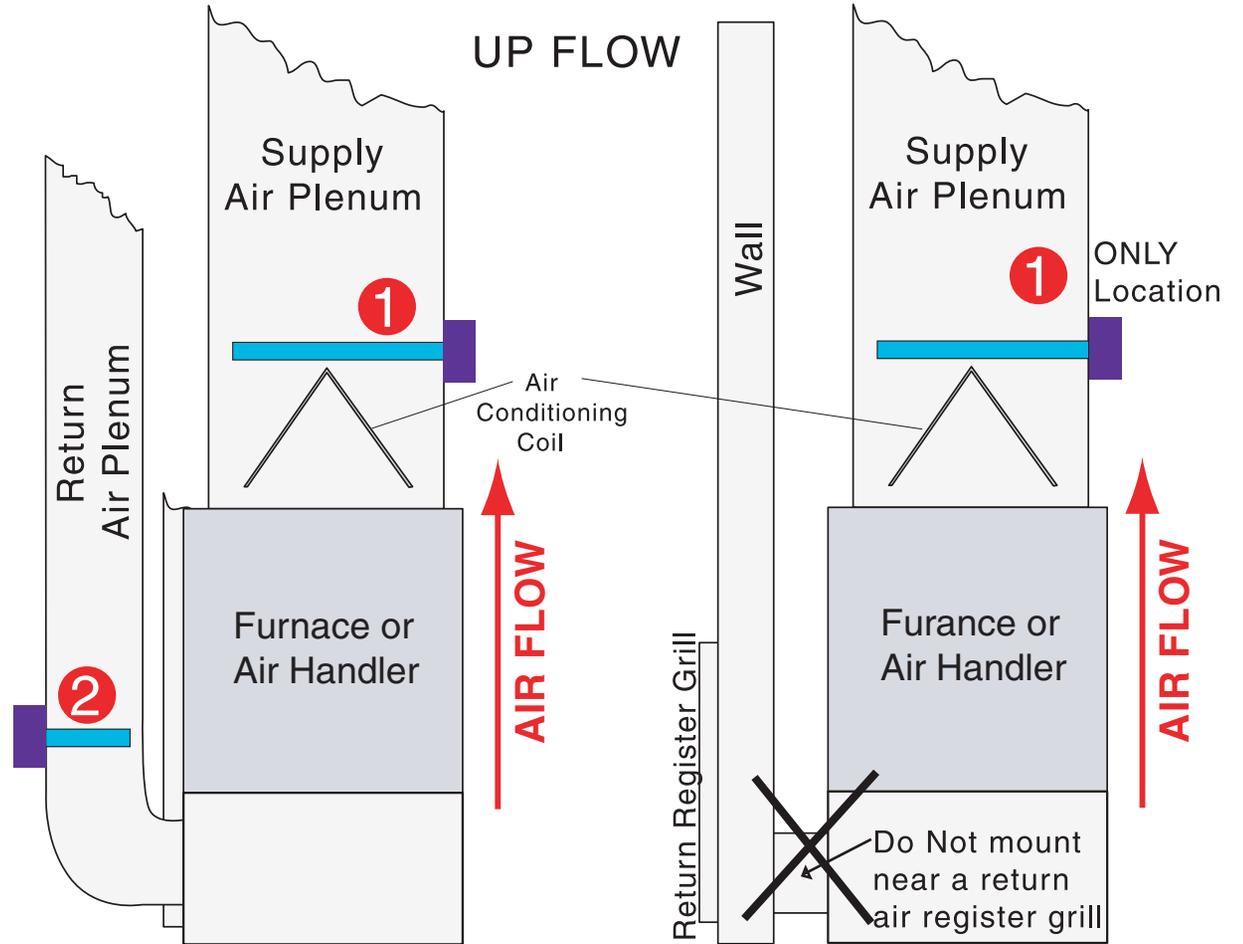


HORIZONTAL FLOW

(These units are mounted in attics or crawl spaces)

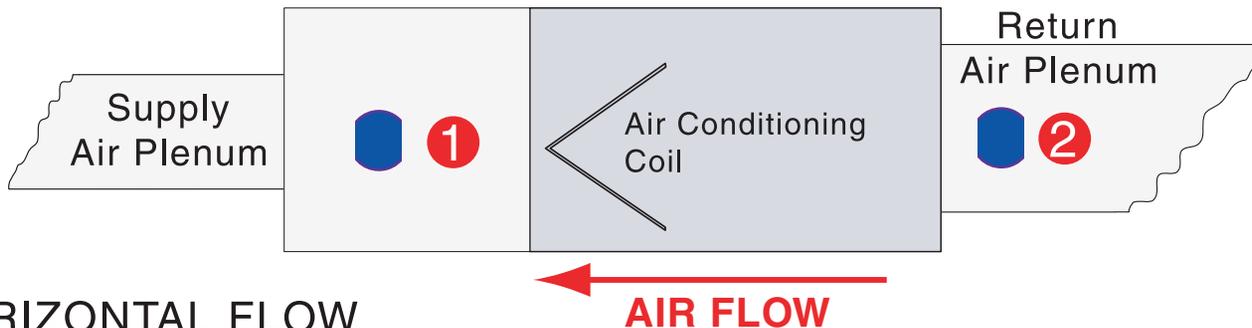


- 1** Air+Health™ Best Location
- 2** Air+Health™ Optional Location

BASEMENT INSTALLATION

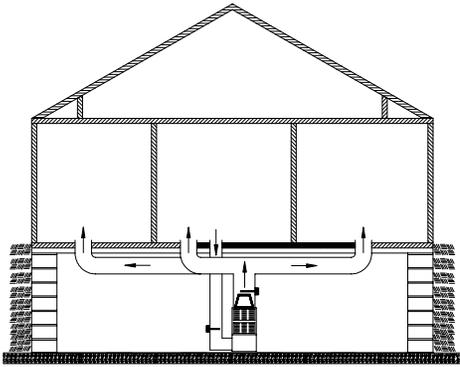


CLOSET INSTALLATION

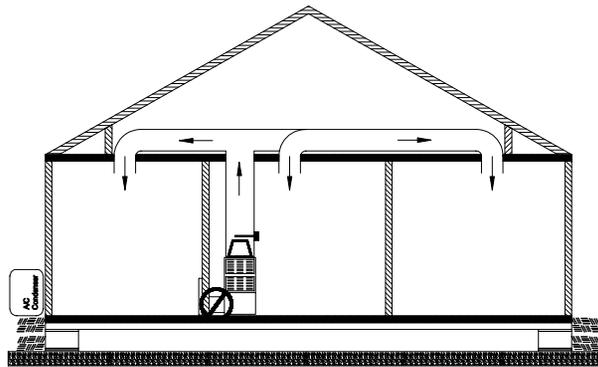


- DO NOT mount near a return air register grill

PACKAGE SYSTEM OR HEAT PUMP (WITH NO SEPARATE AIR HANDLER)

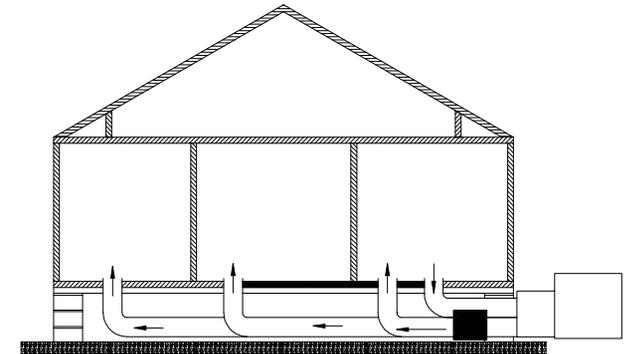


- DO NOT mount unit on plastic flexible duct.
- Mount unit on metal housing if there is a portion of metal duct available.
- If a metal housing is not available, you may need to fabricate a mounting box.


HEAT PUMP WITH SEPARATE AIR HANDLER

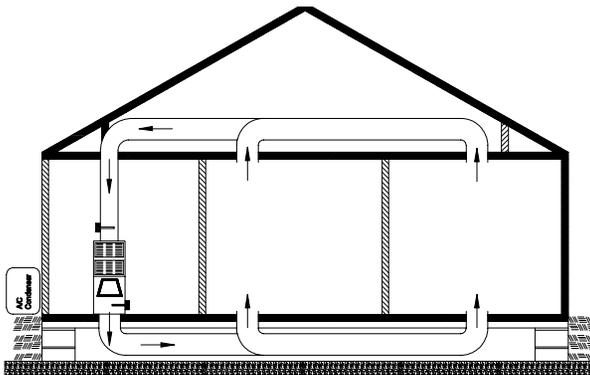

ATTIC INSTALLATION

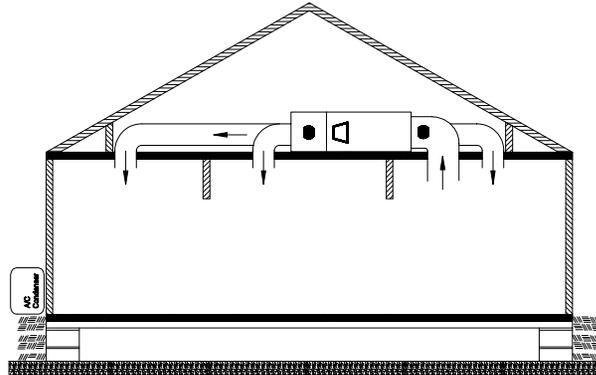

HEAT PUMP WITH SEPARATE AIR HANDLER (IN THE ATTIC OR CRAWL SPACE)

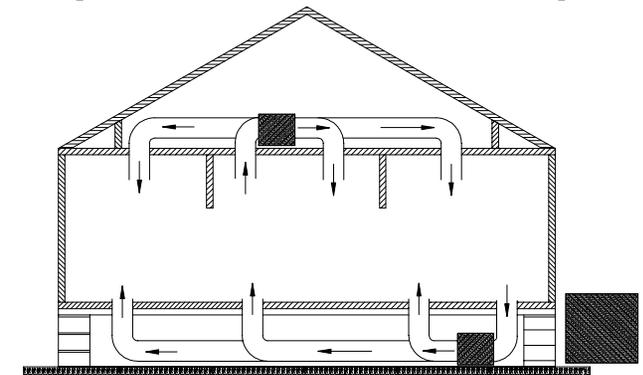

- Step 1:** Identify which type of system you have.
Step 2: Determine where your air handler is located.
Step 3: Choose best location for installation per diagram on reverse side of this page.